

STEPS TO SET PRIORITY MODE:

- (1) PRESS MENU BUTTON 2 TIMES TO DISPLAY PRIORITY MODE SCREEN
- (2) PRESS DOWN BUTTON TO SELECT PRIORITY MODE
- (3) PRESS ENTER TO DISPLAY AC/DC PRIORITY SCREEN
- (4) PRESS UP OR DOWN BUTTON TO SELECT AC OR DC PRIORITY
- (5) PRESS ENTER TO CONFIRM DC PRIORITY
- (6) PRESS MENU 2 TIMES TO DISPLAY MAIN SCREEN WHICH WILL NOW SHOW MODE AS - DC

WATCH VIDEO BELOW:

<https://psc-solaruk.com/ac-or-dc-priority/>