Wi-Fi Quick installation Guideline

1. Download APP

Scan the QR Code ad below and download the APP



IOS

2. Create an account

Open the APP, tap the Register now button to enter next page. According the prompts, type in the information to create an account.(Fig.1).

3. Login in

Type in the user name and password, tap the Login in button to enter the main interface (Fig.2)



(Fig.1)

(Fig.2)

4. Add Device

Press "+" enter next page, tap the device (SP520) and enter next page, tap Configure Network enter next page, input SSID and Password, then press Start button to start wireless connection, then wait operation end. (Fig.3)

上午11:46 0.0K/s创 ma Type ~ My	antan ≉ œ Device(4)	上午11:4515.9K/s创 编 编 录 (重 Type ~ Equipment type	上午11:45 24.7K/s び en Sal Sal Sal 第 団) く Equipment Details	上行11:52 3.4K/s 🗹 🚥 🗣 👘 🕍 🕍 🕮 く Configure Network	上午11:54 1.2K/6 😻 🗰 👘 🛛 🖓 🗇 🄇 🖉
Search by device	tes foverter DAETYOFTISE W Energy		SP520 Series Inverte r Type: New Energy	SSID: FRECON02_2.4G	SSID: FRECON02_2.4G
SP520, SP330 SP Type: M SP520 SP MAC: E SP520 SP MAC: E SP520 SP520 SP520 SP520 SP520	92 Renser Internet Inter	SP520 Seriel Inver	5p520 off grid energy storage inverter	Please enter the passwerd	Configuring network, please wait Loading Cancel
Den ce	BQ Q LM Ni	Eters Et Av	Configure Network		

If operation failed, we can reset the inverter Wi-Fi module by LCD interface and try again. Inverter Wi-Fi reset process as below. Press "ENTER" button 3s to enter setting mode -> Press "DOWN" button to find program 37 -> Press "ENTER" button to find reset option->Press "ENTER" button to confirm reset option ->Press "ESC" button to finished the setting.

	WiFi Reset	Default	Reset	
37		3 <u>] 96</u> E	<u>37 ⊦s⊦</u>	
		After WiFi module reset, the inverter should be disconnected from		
		the router, need WiFi configuration again.		